

DOSKO®

Please reorder as needed.

These safety sheets are free of charge. Additional safety sheets are available online for your convenience at www.dosko.com. They are also available by contacting Dosko at 866-298-3659 and requesting item # E786112.

NOTE:

Please make sure that your customers sign the back of this safety sheet indicating they have read and understand the operating and safety instructions.

Always follow manufacturer instructions

OPERATING INSTRUCTIONS

DOSKO®

Models 337-13H & 357-13HE



**ALWAYS
THINK
SAFETY**

Know Your Dosko: BEFORE STARTING OR USING THIS MACHINE, READ AND REVIEW THIS SAFETY SHEET! BE AWARE OF ALL POTENTIAL DANGERS. PROTECT WINDOWS AND VEHICLES FROM POSSIBLE FLYING DEBRIS AND BE AWARE OF ALL NECESSARY SAFETY PRECAUTIONS!

BEFORE GRINDING STUMPS

- Be aware of all underground utilities before grinding stump.

STARTING GRINDER

- Press down on handle bar so that cutter wheel is off the ground.
- Pull out on-off switch (located on control panel).
- Turn switch to "On" position (located on engine).
- Pull choke if engine is cold (located on engine).
- Set throttle about ¼ open (located on engine).
- Engage operator presence handle by pushing handle (small diameter bar) towards "Handle Bar Bow."
- **Recoil:** Pull recoil rope to start engine (located on engine).
- **Electric:** Turn key to start engine (located on engine).
- When engine starts — close choke.

GRINDING STUMP

- Push grinder to stump so that the stump is located just in front of the cutter wheel.
- Using the brake lever — lock the one wheel.
- Pull throttle to full open (located on engine).
- Lower the cutter wheel slowly using a left-to-right motion to grind the stump.
- Grind stump to desired depth.
- Handle bar may have to be adjusted to accommodate for height of stump or desired depth. Raise or lower handle bar to a comfortable safe position.
- Reposition grinder further on stump and begin this process again.

▲ CAUTION : CUTTING WHEEL WILL CONTINUE TO TURN FOR A SHORT PERIOD AFTER ENGINE IS SHUT OFF.

Item # E786112

Thank You For Choosing DOSKO®

While your Dosko stump grinder is very easy to use, and is safety-engineered, there are some simple rules and procedures which **MUST** be followed to ensure your safety, and to ensure the machine's best performance. Please take a few moments to review these rules and procedures:

CAUTION

READ all instructions and decals before starting!

WEAR proper safety clothing; safety glasses, sturdy footwear, gloves, face shield, etc.!

OPERATE grinder only from operating zone!

NEVER start grinder before checking controls and brakes!

ALWAYS lock brake before grinding begins!

NEVER allow anyone within 75 feet while grinding!

NEVER leave grinder unattended while running!

NEVER grind anything other than stumps!

ALWAYS be aware of your surroundings!

ALWAYS position machine to protect windows and vehicles from flying debris!

ALWAYS be prepared for emergencies by having first-aid supplies and a fire extinguisher!

NEVER operate while guards or shields are removed!

NEVER attempt to override any safety devices!

NEVER use in bad or questionable weather!

ALWAYS shut the machine off if any unusual noise or vibration occurs!

ALWAYS store machinery and gasoline away from the reach of any children!

QUESTIONS? Call your authorized Dosko dealer or rental center, or call Dosko direct at 866-298-3659!

Always follow manufacturer instructions

TOWING INSTRUCTIONS

There are certain legal road requirements for various states. It is the responsibility of the owner or user to be aware of these laws; and to obey them. For example, there may be lighting or licensing requirements.

1. Position tow bar into socket, then insert lock pin with safety clip.
2. Connect grinder to vehicle using 2" tow ball. (Be sure that proper size ball is used to match coupler size.)
3. Be sure the tow hitch socket is closed/secured to tow ball and pinned.
4. Be sure that the safety chain is properly hooked to the vehicle and stump grinder by using the coupling links.
5. Be sure that wheels are fastened tightly and that tire condition and air pressures meet the manufacturer's specifications listed on the tire.
6. Make sure brake is released.

CAUTION

NEVER attempt to back up unit when in the tow position using towing vehicle.

NEVER tow exceeding 45 MPH.

« DEALER INFORMATION »

**ALWAYS
THINK
SAFETY**

Item # E786112

DOSKO®

Use this form when renting or loaning the equipment model(s) indicated on the reverse side of this sheet. Have the user initial each of the three statements below and sign acknowledging receipt of this safety sheet.

Remove This Section and Keep For Your Records!

___ I have been instructed in the use of this stump grinder, and I fully understand its operations.

___ All controls have been checked and are in good working condition.

___ I have been instructed about the dangers of this machine if not used properly. I am aware of all safety procedures and I accept full responsibility. I agree to "hold harmless" the manufacturer, dealer, rental yard owner, or anyone connected with Dosko.

Dosko Stump Grinder Model (please circle):

337-13H
Honda

357-13HE
Honda

Serial Number _____

Name _____

Company _____

Address _____

City _____

State _____ Zip _____

Telephone (____) _____

Signature _____

Date _____

Dealer/Agent Name _____

Dir/Agt Signature _____

Date _____