

EASY ROOTER JUNIOR

Parts List and Diagram

CAT. NO.	DESCRIPTION	CAT. NO.	DESCRIPTION
EJ-100	Frame Complete	EJ-205	20 ft. Power Cord with Plug &
EJ-101	Frame Only		Ground Fault Circuit Interrupter
EJ-101-A	Cord Wrap Cap (2)	EJ-207	Air Foot Switch and Reverse
EJ-102	8" Rubber Wheel (1)		Switch Assembly
EJ-102-1	10" Rubber Wheel (1)	EJ-207-A	Box Only with Cover & Screws
EJ-103	Axle		
EJ-103-A	Wheel Caps (2)	EJ-207-B	Foot Pedal and Hose
EJ-103-B	Spacer Washers (2)	EJ-207-C	Hose Clamp (2)
EJ-103-C	Axle Spacer (2)	EJ-207-D	Foot Pedal
EJ-105	Handle with Knobs	EJ-207-E	Power Switch Diaphragm
EJ-105-A	Handle Locking Knob (2)	EJ-207-F	Air Hose
EJ-106	Brake Rod	EJ-207-G	Reverse Switch Only (3-Way)
EJ-106-A	Roll Pin (1/8" x 1")	EJ-207-H	Rubber Switch Boot
EJ-107	Brake Rod Handle with Knob		
EJ-107-A	Plastic Knob	EJ-208	V-Belt (47")
EJ-107-B	Axle Retaining Pin (1/8" x 5/8")	EJ-209	V-Belt Tension Spring
EJ-107-C	Brake Rod Latch with Screws	EJ-211	Belt Guard with Velcro
		EJ-211-2	Belt Guard with Slot for Stud
EJ-108	Drum Support Shaft	EJ-212	Motor Support Bracket with Bolts
EJ-109	Bronze Thrust Washer		
EJ-110	Felt Washer	EJ-212-A	Guide Screws (2)
EJ-111	Drum Hub Retaining Washer		
EJ-112	Drum Shaft Retaining Bolt	EJ-213	Nuts, Bolts, Washers (4)
EJ-113	Rubber Leg Tip (2)		
EJ-115	Cutter Holder	EJ-300	Cage with Hub and Bearings
EJ-116	Screws & Washers (2)	EJ-302	Cage Hub with Bearings
EJ-201	1/3 hp Capacitor Motor	EJ-302-A	Cage Hub Bearings (Set)
	Comp. w/ Air Foot Switch,	EJ-302-C	Bolts & Lock Washers (12)
	Reverse Switch Assembly &	EJ-303	Cable Locking Thumb Screw
	Ground Fault Circuit Interrupter	GFI-EJ	Ground Fault Circuit Interrupter w/
EJ-201-C	Knob		Cord for Easy Rooter Junior
EJ-204-1	Slip Clutch (See Easy Rooter Diagram	EJ-DECAL	Set of Safety Decals
	ER-204 for Parts Breakdown)	EJ-VIDEO	Instructional Video DVD

General Wire Spring Co.

1101 Thompson Avenue

412/771-6300

McKees Rocks, PA 15136 USA

